

Setting up PSCAD v4.6.3 Update 5

This document provides instructions for setting up PSCAD v4.6.3 Update 5.

Note

If an earlier build of PSCAD v4.6.3 is already installed, running this installation will replace your earlier build.

Release Notes

The release notes for this version are posted to this article.

System Requirements

System requirements for v4.6.3.5 remain the same as for v4.6.3.4, which are posted to this article.

Obtaining Access to the Update

If the update is not available in your MyCentre user account, you may request the download from our sales desk <u>sales@pscad.com</u>. Please ensure to include your PSCAD license number in your request.

Instructions

Set up PSCAD v4.6.3 Build 5 as follows:

- a. Log in to MyCentre, and download and unzip the file.
- b. Launch setup.exe, and select the option to elevate, then:
 - If an earlier v4.6.3 build is already installed, select the option *Repair* when prompted.
 - For detailed or quick start setup instructions, please refer as follows:
 - o If using certificate licensing, refer to this <u>article</u>
 - If using lock-based licensing, refer to this <u>article</u>
- c. If using the Intel Fortran compiler with Visual Studio 2015 or newer, PSCAD must be reconfigured to use the libraries as per Step 2 of this <u>article</u> after the installation.

We hope this helps to set up PSCAD v4.6.3 Update 5. If there are any questions, please contact our support desk.

Copyright © 2020 Manitoba Hydro International Ltd. All Rights Reserved.